


Caring for your Brewer


Regular cleaning keeps your brewer running smoothly. Always be sure to turn off your brewer before cleaning.

For detailed brewer cleaning instructions and videos, visit commercial.keurig.com. For service, please contact your Keurig® Authorized Distributor.

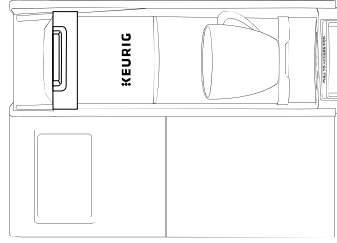


Brewer Exterior

Keep your brewer looking its best by cleaning the exterior from time to time. Just clean with a damp, soapy, lint-free, non-abrasive cloth. Never immerse the brewer in water or other liquids.

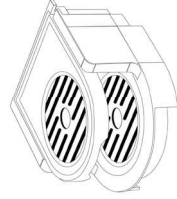

Drip Tray

To empty the drip tray grasp the drip tray by the side and lift and pull towards you. This disengages the drip tray, which can now be emptied and returned back in place. Keep the drip tray level at all times to avoid spilling.

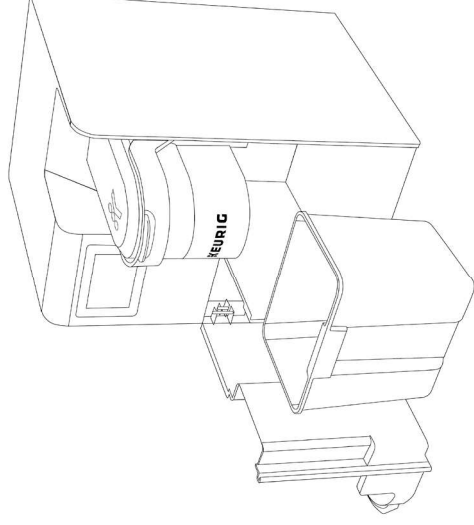


K-Cup® Pod Bin

The used K-Cup® pods are automatically ejected into the internal K-Cup® pod bin. When the K-Cup® pod bin requires emptying, the brewer touchscreen will display "Please empty the pod bin".

To empty the K-Cup® pod bin, open the brewer door by grasping the handle and swinging the door fully open to remove the K-Cup® pod bin from the drawer. Dispose used K-Cup® pods and replace the K-Cup® pod bin.

NOTE: At the end of each day, we recommend emptying the K-Cup® pod bin, along with running a rinse brew with water. It is recommended to follow these instructions immediately after the use of hot cocoa or other milk-based pods to avoid the possibility of a clogged needle.

Caring for your Brewer (continued)

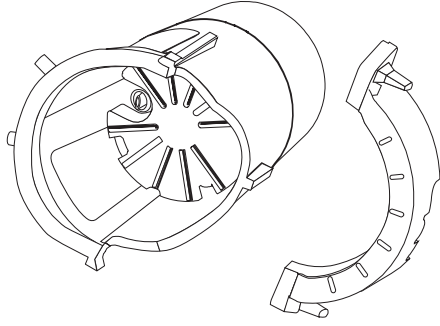

If clogging occurs, both needles can be cleared by inserting a straightened paper clip into the hole. Gently move it around to loosen any coffee grounds, then follow with a rinse brew with water.

CAUTION: To avoid risk of injury, please be careful of the two sharp needles when cleaning the PHA and PM.

K-Cup® Pod Holder Assembly and Needles

The K-Cup® Pod Holder Assembly (PHA) should be removed from the Puncture Mechanism (PM) for cleaning. To remove the PHA, remove the half rim, then squeeze the two snap tips on the rear of its flip seat to release.

The PHA can be cleaned by submerging it in Keurig® Descaling solution, or a vinegar solution (1:3), for 12 hours or more. There may be residual coffee grounds in the groove and the flip seat. If required, take a cotton swab to clean the area. Thoroughly rinse the PHA before restoring it into the flip seat, then to the half rim to lock in place.

There are two sharp needles in the PM that puncture the K-Cup® pod. The Entrance Needle is located underneath the lid of the handle, and the Exit Needle is inside the PHA. These needles may get clogged over time due to the build up of scale or residual pod ingredients.